




CSL ROUTER PRO - INDUSTRIAL GRADE QUICK GUIDE

CSL Router Pro - Industrial Grade Quick Guide

Introduction

This section provides basic information to enable you to install and commission CSL Router quickly. CSL Router is preconfigured with the SIMs already fitted in the SIM slots.

Figure 1 - CSL xDSL Router

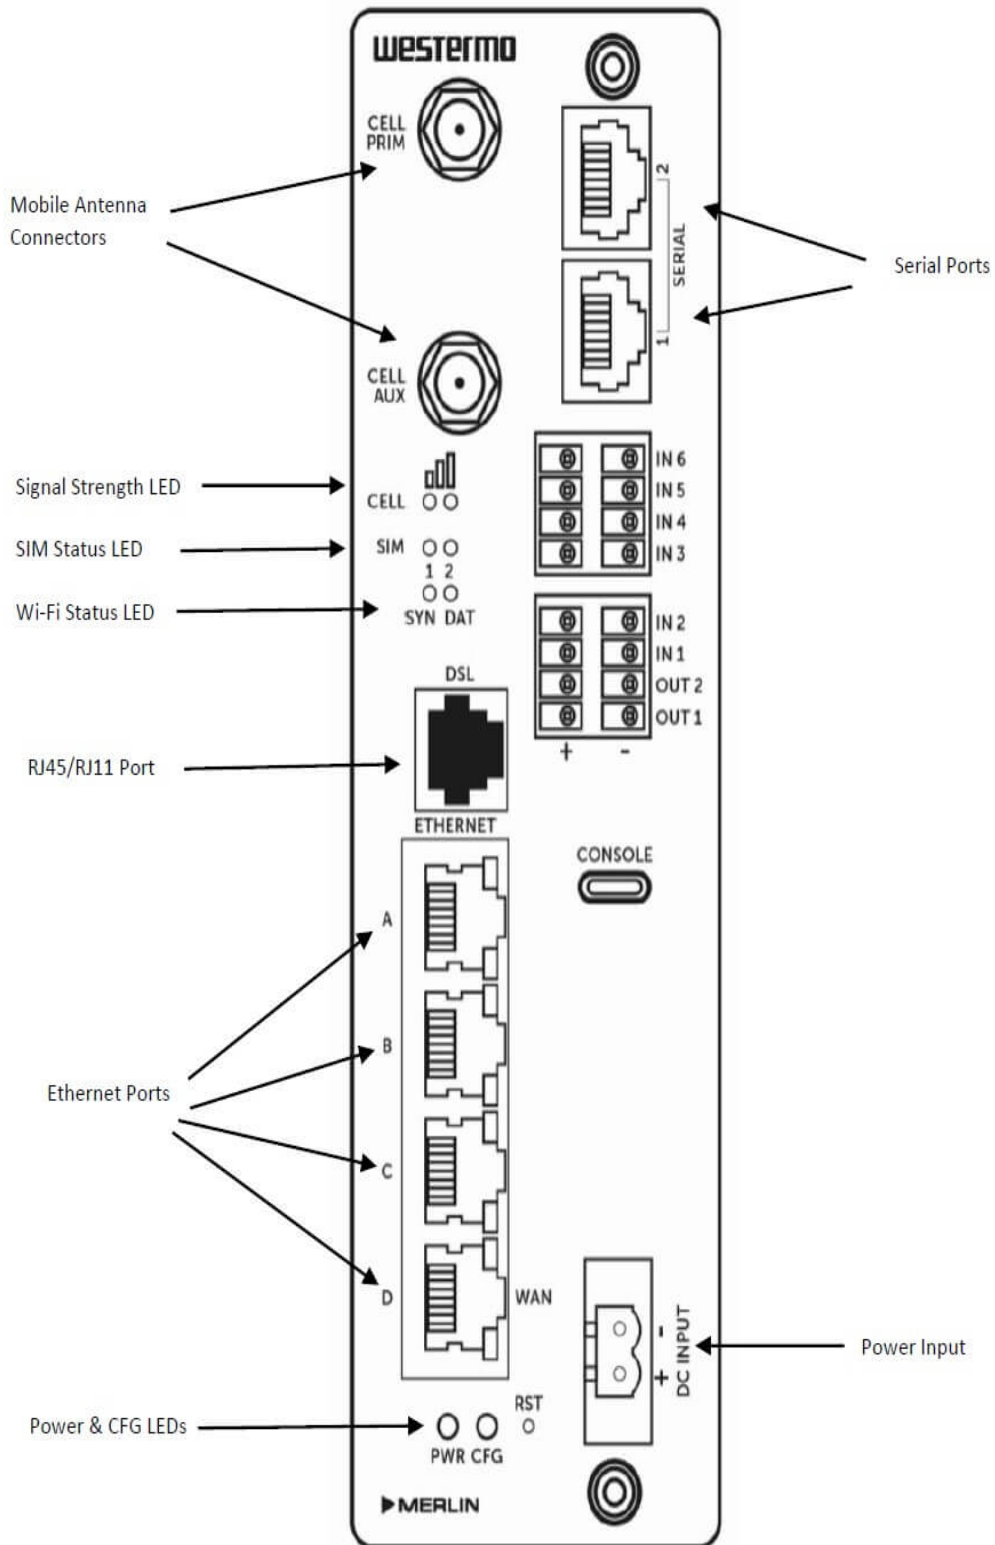

CSL Router Pro - Industrial Grade Quick Guide

Step 1. Installation Site

1. Find a suitable location with good 4G coverage
2. Keep away from sources of interference i.e. monitors, fridges, power supplies, etc.
3. LEDs will show connection status

CSL Router Pro - Industrial Grade Quick Guide

Step 2. Aerial xDSL and Power

1. Fit the included Aerial to the front connection port marked CELL PRIM & CELL AUX
2. Plug the broadband cable into the DSL port on the front of the router and plug the other end into the BT socket.
3. Power up the Router using the supplied PSU

CSL Router Pro - Industrial Grade Quick Guide

Step 3. xDSL Status

1. If the xDSL service provisioning has been confirmed the SYN LED should be blinking and then become solid
2. Once the line synch is complete the LED DAT should flash indicating data transfer.

CSL Router Pro - Industrial Grade Quick Guide

Step 4. Signal Strength

1. For best results ensure that both green signal strength LEDs are ON to indicate the Router has established good signal strength
2. OFF/ON LED status indicates a medium signal strength which is also acceptable
3. ON/OFF LED status indicates a poor signal strength and the signal will need to be improved.

CSL Router Pro - Industrial Grade Quick Guide

Step 5. Connect Devices

1. IP devices can now be connected using the supplied ethernet cable. For your specific LAN IP addresses please see the sticker on the back page.

THE EXTERNAL WALL MOUNTED CSL HIGH GAIN AERIALS ARE AVAILABLE AS AN OPTIONAL ACCESSORY. PLEASE CONTACT CSL TECHNICAL SUPPORT FOR MORE INFORMATION

CSL Technical Support can be contacted via email iotplatinum@csl-group.com or by phone
+44 (0) 1895 546 214

CSL Router Pro - Industrial Grade Quick Guide

Troubleshooting

ISSUE = THE SITE IS OFF-LINE AND THE ROUTER CANNOT BE CONTACTED ON EITHER PATH

Q: Is the router powered?

A: The Power Adaptor LED and router's POWER LED should both be on.

- If the Power LED is off when the Power Adaptor LED is off - the power source may be faulty or if ok replace the power adaptor or mains cable.
- If the Power LED is off when the Power Adaptor LED is on - replace the router.

Q: Are all xDSL connections correct and are they working reliably?

A: If SYN & DAT indicators are off please check connectors are well seated. If connections seem OK swap the filter, cables, or adaptors between the line socket and router. Customer provided telephone line extension leads or sockets may need to be checked and replaced.

Q: Is the xDSL path now OK?

A: The SYN indicator should be on and stable and the DAT indicator should be on but flashing to show data is passing through the router.

- If the SYN is on & DAT indicators is on but not flashing then contact CSL Technical Support to confirm the router's xDSL path has restored.
- If the SYN indicator is off - the router may have recently been powered up or rebooted, wait a minute and recheck.
- If the SYN indicator persistently drops out or begins flashing then the router may be unable to sync or randomly re-syncing. If all checks in have been made to remove any connection problems then retest with a spare router, otherwise, contact the CSL Technical Support who will arrange for an xDSL test.

Q: Is the router configured correctly?

A: The CONFIG LED should be on or off but not flashing. If the CONFIG LED is flashing then contact the CSL Technical Support who will arrange the download of the site-specific configuration.

Q: Is the mobile radio path now OK?

A: Ideally, one or more signal strength LEDs should be permanently on. If all Signal Strength LEDs are off it indicates no signal is available. If the signal strength is usually OK this could indicate there may be a local transmitter fault. Contact the CSL Technical Support if this is suspected.

ISSUE = THE SITE IS OFF-LINE BUT THE ROUTER CAN BE CONTACTED BY CSL

Q: Is the ethernet connection OK?

A: The Ethernet Port's Green LED should be on. If it is off, please ensure the

connected equipment is powered, otherwise, disconnect and reconnect the Ethernet cable into the router and equipment ports. If the issue persists then replace the Ethernet cable. If the problem persists even further, contact the CSL Technical Support who will arrange to check and confirm that the router port is enabled and that the router is configured correctly.

ISSUE = THE SITE IS ON-LINE BUT THE XDSL PATH IS UNAVAILABLE

Q: Are all xDSL connections correct and are they working reliably?

A: If the SYN & DAT indicators off - Check connectors are well seated. If connections seem OK swap the filter, cables or adaptors between the line socket and router. The issue could also be the customer's telephone line extension leads or sockets are faulty - check these and replace if necessary.

- If the SYN is on & DAT indicators is on but not flashing then contact CSL Technical Support to confirm the router's xDSL path has restored.
- If the SYN indicator is off - the router may have recently been powered up or rebooted, wait a minute and recheck.
- If the SYN indicator persistantly drops out or begins flashing then the router may be unable to sync or randomly re-syncing. If all checks in have been made to remove any connection problems then retest with a spare router, otherwise, contact the CSL support who will arrange for an xDSL test.

ISSUE = THE SITE IS ON-LINE BUT THE XDSL PATH IS UNAVAILABLE

Q: Are all xDSL connections correct and are they working reliably?

A: If the SYN & DAT indicators are off - Check connectors are well seated. If connections seem OK swap the filter, cables, or adaptors between the line socket and router. The issue could also be the customer's telephone line extension leads or the socket is faulty - check these and replace them if necessary.

- If the SYN is on and the DAT indicators are on but not flashing then contact CSL Technical Support to confirm the router's xDSL path has been restored.
- If the SYN indicator is off - the router may have recently been powered up or rebooted, wait a minute and recheck.
- If the SYN indicator persistently drops out or begins flashing then the router may be unable to sync or randomly re-syncing. If all checks in have been made to remove any connection problems then retest with a spare router, otherwise, contact the CSL support who will arrange for an xDSL test.

ISSUE = THE SITE IS ON-LINE BUT THE MOBILE RADIO PATH IS UNAVAILABLE

Q: Is the signal OK?

A: Check the signal strength LEDs. Ideally, one or more mobile signal strength LEDs should be permanently on

- If the mobile signal strength LEDs are off - it indicates no signal is being received. Check the antenna connection & cable. If the signal is usually OK there may be a local transmitter fault. Contact the CSL support if this is suspected
- If a single mobile signal strength LED is off - it indicates a weak signal. The standard antenna may be inadequate. Contact the CSL Technical Support who

will arrange a check to confirm whether the signal is suitable to ensure reliable operation. An external antenna or antenna relocation may be required

- If two or more Mobile signal strength LEDs are permanently on - contact the CSL Technical Support to confirm the router's radio path has restored

A: The SYN indicator should be on and stable & the DAT indicator should flashing if data is passing through the router

Q: Are the more than two green signal strength are on?

A: At least one green LEDs must be on for the radio to operate properly. If no LEDs are ON - it indicates that no signal is available in the area or possible router fault. Contact the CSL Technical Support if this is suspected

Figure 2 - LED Indications

	LED BEHAVIOUR	STATUS
Power / CFG	Green - double flash	Router is booting after power up
	Green - flashing quickly	Router is in factory config mode
	Green - permanently on	Router has completed boot process and is ready
SIM Status	Off	Router is not connected to a Mobile Data Network
	Green flashing	Router is attempting to connect to a Mobile Data Network
	Green on	Router has successfully connected to a Mobile Data Network
Signal Strength	Green - off/off	No cellular radio signal detected
	Green - on/off	Low cellular radio signal detected
	Green - off/on	Medium cellular radio signal detected
	Green - on/on	Good cellular radio signal detected

SUPPORT

For more information on CSL Router or other IoT Services please contact CSL Technical Support:

UK Tel: +44 (0) 1895 546 214

Email: iotplatinum@csl-group.com

Please ensure you have the following information when contacting CSL support

team:

- How the Incident is Impacting Thames Water business
- IP Address/Router serial/CSL or Thames Water site reference (provided at the point of order) Symptoms
- The time at which the incident became apparent
- Site location/access/contact details of where the incident is occurring.
- Details of checks that have already been made (see Troubleshooting section)
- Thames Water incident reference number (if applicable)

CSL Router Pro - Industrial Grade Quick Guide

Technical Specifications

WAN1 (DSL)	VDSL2 / ADSL2+ Annex A, Annex B, RJ11
LAN Ports	Ethernet 4 x 10/100/1000 Mbit/s, Ethernet TX, RJ45
WAN Interface	Dual-SIM Failover 4G LTE Category 4 Modem
VPN	IKE Version 2, X.509 certificates, ECC, SHA2_512 support, AES_CBC (256), PFS, SCEP, DH_8192
Dimensions (W x H x D)	50 x 170 x 100 mm
Weight	760g
Serial	Up to 2 serial ports, each software configurable for RS232/RS485
Digital Inputs	Up to 6 digital inputs for detecting remote contact open/close
Digital Outputs	Up to 2 relay contact outputs. 220 VDC, 2 Amp rating