




# MINIAIR QUICK GUIDE

# MiniAir Quick Guide

## Technical Specifications

**Figure 1**

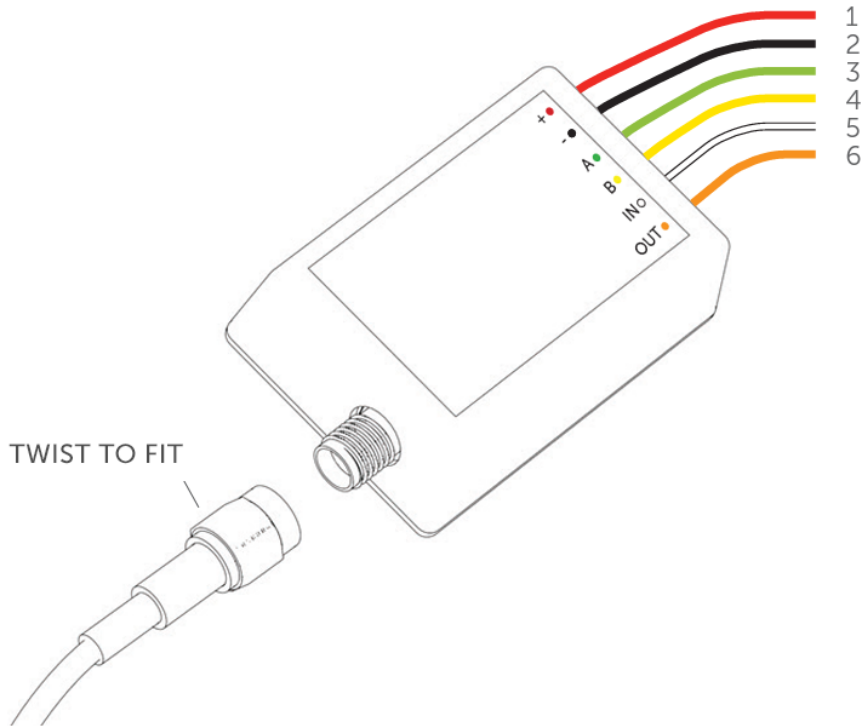

### Wire Explanation

**1** = 12v DC Power Supply

**2** = Ground

**3** = A - to panel's Digi-Modem

**4** = B - to panel's Digi-Modem

**5** = To Armed Status Output

**6** = To Keyswitch Zone

Dimensions	30mm (h) X 45mm (w) X 15mm (d)
Weight	25g excluding aerial
Temperature	-20°C to +60°C transit
Humidity	0 - 80% non - condensing
Mounting	Any orientation

Warranty	2 years
Power Requirement	9.0 v - 30.0 v (DC)
Current Consumption	Quiescent = 15 mA Signalling = 200 mA
Radio Path	GPRS
Aerial	50 ohm (nominal) on MMCX socket
Operation Method	Store and forward
CIE Interconnections	1 Digital Input, 1 Digital Output, Analogue (Dial Capture) RCT Protocols Fast Format, SIA & Contact ID
User Serviceable Parts	There are no serviceable parts within the MiniAir
Environmental	Class II
Applicable Standards	Suitable for use in alarm systems complying to: EN50136-1:2012 SP1 ATS Classification: EN50136-1-1:1998 ATS 1/Grade 2

# MiniAir Quick Guide

## Step 1 - Wiring

- 1** - Power panel down
- 2** - Wire as per diagram in the [Technical Specifications](#)
- 3** - Connect aerial
- 4** - LED will show connection status

# MiniAir Quick Guide

## Step 2 - Dial Capture

For panels with PSTN Modems:

- 1 - Configure PSTN dialler of alarm panel – refer to manufacturer’s guide
- 2 - Select DTMF (tone dialling)
- 3 - Select signalling format: Fast Format / Contact ID / SIA
- 4 - Enter any PSTN receiver telephone number (ie 01)
- 5 - Enter any 4 Digit chip/account number (ie 1234)

**WHEN USING FAST FORMAT, THE MINIAIR INSTALLER APP AND MY HOME ALARM APP ARE PREDEFINED WITH A STANDARD FAST FORMAT CHANNEL CONFIGURATION. PLEASE PROGRAMME THE BELOW WITHIN YOUR CONTROL PANEL:**

PIN	CHANNEL
1	Fire
2	Panic
3	Intruder
4	Open/Close
5	Fault
6	Bypass
7	Confirmed Alarm
8	Tamper

# MiniAir Quick Guide

## Step 3 - Bell Output

For older panels with a bell output, please only use the below method to trigger an alarm:

- 1** - Configure bell/siren output of alarm panel – refer to manufacturer's guide
- 2** - Wire the bell trigger to the MiniAir input (IN – white cable)
- 3** - Download the MiniAir Installer App for Android/iOS
- 4** - Please contact CSL to obtain log in credentials to the MiniAir Installer App & select device by serial number/ICCID
- 5** - Enter Settings the select Advanced Settings
- 6** - Depending on your panel configuration set Input pins as: General Alarm N.O./N.C.

# MiniAir Quick Guide

## Step 4 - End User App

- 1** - Download the My Home Alarm App for Android/iOS
- 2** - Login with credentials provided
- 3** - When logging in for first time change username and password. Then enter recovery email address
- 4** - Within the App, select menu button and then settings option
- 5** - Select notifications and adapt as per the on screen instructions
- 6** - If you require remote arming/disarming follow step 5 of this guide
- 7** - Provide a demo for your customer

# MiniAir Quick Guide

## Step 5 - Remote Arm & Disarm

Firstly, configure the panel as below:

- 1** - Configure a momentary/latching keyswitch – refer to manufacturer’s guide
- 2** - Wire OUT (orange wire) to the momentary/latching keyswitch of the panel
- 3** - Configure a programmable output from the panel to Activate (switch to ground) when the panel is armed and to deactivate when disarmed – refer to manufacturer’s guide
- 4** - Wire the programmable output to IN (white wire) on the MiniAir

Please note: A relay may be required when configuring a panel with a latching keyswitch

Secondly, configure the App:

- 1** - Enable Open/Close reporting on the panel
- 2** - Enable arming/disarming from the settings menu on the My Home Alarm App
- 3** - Ask the customer to enter a remote pin of their choice
- 4** - Arm/Disarm from the panel’s keypad within 2 minutes to complete synchronisation



# MiniAir Quick Guide

## Warnings & Troubleshooting

If you have issues receiving events try the following settings of the panel:

Disable "Telephone line monitoring"

Disable "Wait for dial tone" option

Use "A" instead of "0" in the account number

If there is more than one partition, enter an account number for each partition. For certain panels you may need to also specify an account number for the main partition (sometimes referred to as system number)

**WARNING!**

WIRING SHOULD ONLY BE DONE WHEN THE UNIT IS POWERED DOWN ENSURE, ONCE CONNECTED, THE AERIAL IS POSITIONED OUTSIDE THE PANEL