



# MINIAIR QUICK GUIDE

## STEP 5 - REMOTE ARM & DISARM

# MiniAir Quick Guide

## Step 5 - Remote Arm & Disarm

Firstly, configure the panel as below:

- 1** - Configure a momentary/latching keyswitch – refer to manufacturer's guide
- 2** - Wire OUT (orange wire) to the momentary/latching keyswitch of the panel
- 3** - Configure a programmable output from the panel to Activate (switch to ground) when the panel is armed and to deactivate when disarmed – refer to manufacturer's guide
- 4** - Wire the programmable output to IN (white wire) on the MiniAir

Please note: A relay may be required when configuring a panel with a latching keyswitch

Secondly, configure the App:

- 1** - Enable Open/Close reporting on the panel
- 2** - Enable arming/disarming from the settings menu on the My Home Alarm App
- 3** - Ask the customer to enter a remote pin of their choice
- 4** - Arm/Disarm from the panel's keypad within 2 minutes to complete synchronisation