




# VOICELINK QUICK GUIDE

## INTRODUCTION

# VoiceLink Quick Guide

## Introduction

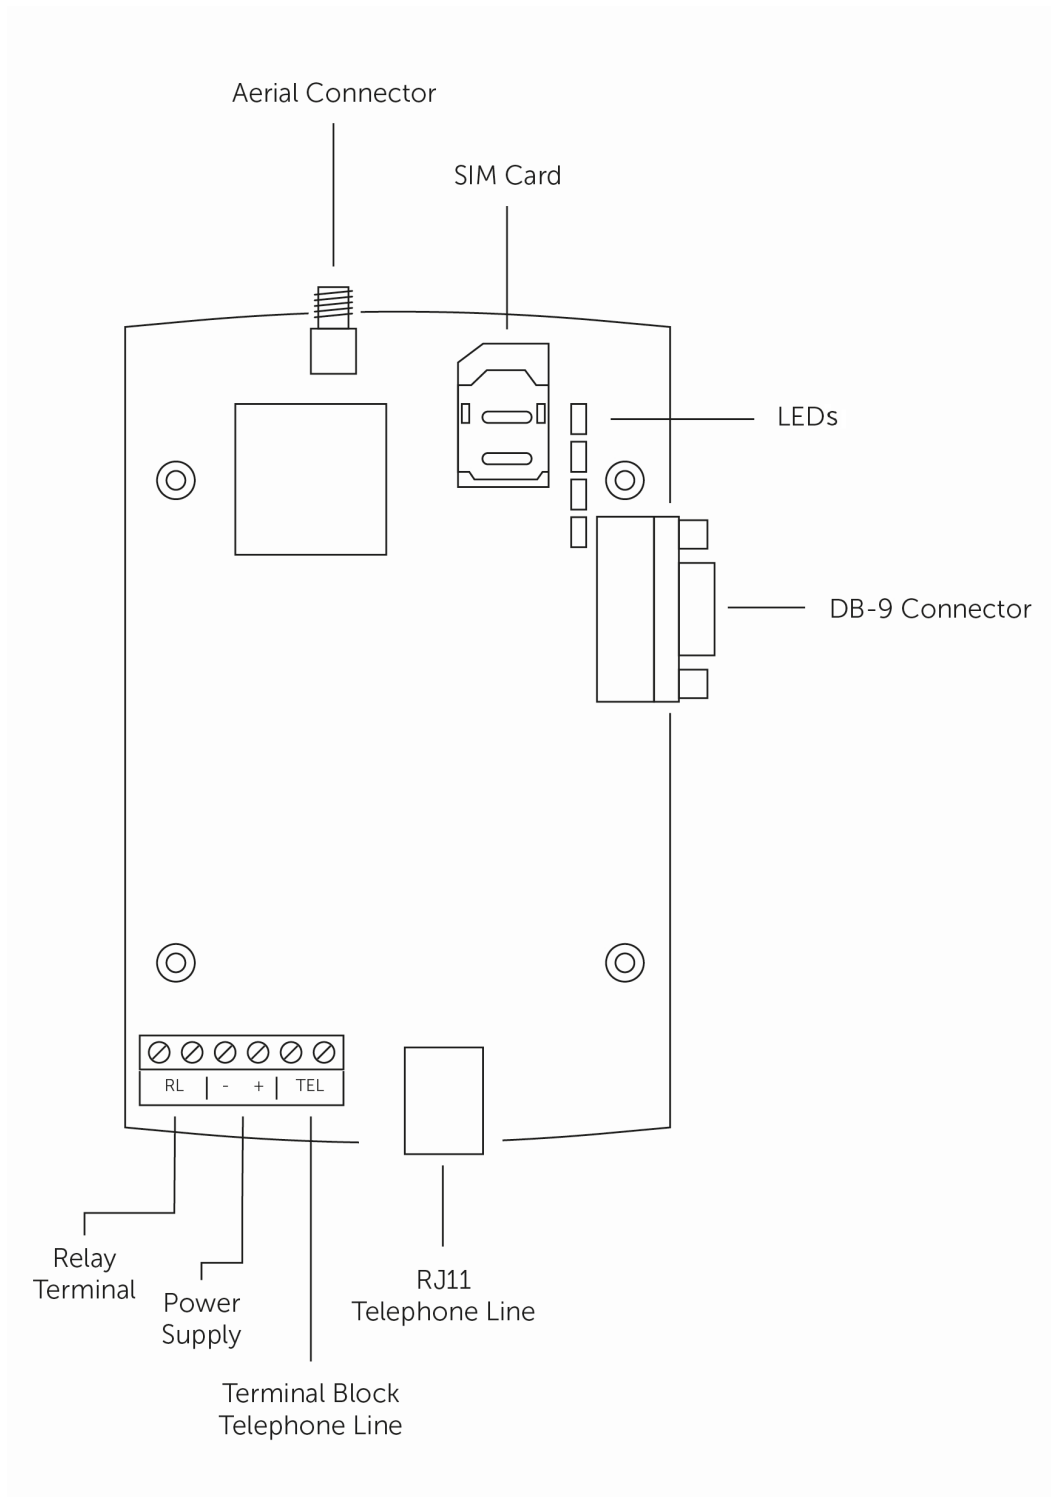

### IT'S as Easy as 1, 2, 3!

1. Wire and connect power- Refer to the installation section for information on steps
2. Wait for the red LED to flash to indicate it is connected to the mobile network

3. When the green LED flashes to indicate the signal strength level of the device, providing it is acceptable (refer to the LED section for details), you're ready to make & receive calls! For customisation, please use the CSL Voicelink web application

IMPORTANT - If you want to use VoiceLink Manager to reprogramme your device, you must register for first time use at least 24 hours before access is granted.

Web Application: [www.csl-voicelink.com](http://www.csl-voicelink.com)

Installer Zone: <https://www.csl-group.com/uk/installer-zone/voicelink.html>

## **QUICK GUIDE**

Voicelink is an analogue PSTN to digital converter for devices which use PSTN modems to make voice/data calls. Using the onboard telephone line output, VoiceLink is compatible with a wide range of telephone set connections or autodialled PABX Analogue line connections. VoiceLink is generally designed to be installed as a plug & play device, however, any configuration changes can be made via a web application or a telephone handset.

VoiceLink uses a radio path with a roaming SIM which connects to the best available network to send voice calls, system notifications & trouble indicators via the mobile network. VoiceLink prioritises calls over the 4G/VoLTE network but will fall back to 2/3G where VoLTE is unavailable, offering the best possible resilience.